TACHOMETER FOR ROTAX ENGINES 447/503/582 WITH DUCATI IGNITION IM-104

Preface

The IM-104 instruments have been designed especially to measure the RPM in Rotax® engines 447/503/582.

The IM-104 is available in 57 mm size.

The IM-104 no need external power supply.

The minimum instrumentation requirements for BRP_ROTAX® two stroke engines include a gauge for continuous RPM monitorization.

General Information

ATTENTION: The IM-104 has not undergone any safety or durability examination to Civil Aviation standards but does incorporate the latest technical development and has been thoroughly tested. Despite the Tachometer being a precision instrument, false indication or misinterpretation of data could occur. By utilizing this instrument the user acknowledges the possible danger and responsibility for all risks.

State of receipt

- Instruments packed in a plastic bag
- 4 attachment screws
- 2 Loose plugs



Technical data

Case: Plastic Weight: 185g

Suitable for: 12 Pole DUCATI Ignition Unit Power Supply: No need external power supply.

Scale: 0..8000 rpm Subdivision scale: 200 rpm each

Max. Deviation: 3%

Dimensions: See sketch

Calibration: Calibrated by the manufacturer prior

to shipment.

Installation Instructions

- Install instruments in pilot's field of vision, free from vibration and glare.
- Protect the instruments against dampness and any kind of gasoline or acid.
- Pay attention to installation dimensions
- Wiring has to be carried out with good quality plastic-sheathed cable.
- When routing cables, prevent possible damage to cables from heat, vibration, shearing or crushing.
- Install a breaker or fuse of 1 Amp.

- The instrument is basically an AC unit, therefore not need to coordinate polarity (AC).
- If there is not need for the lighting output short-circuit the cables 4 y 5 using the double connector (part 866 910) supplied with each engine.

Wire Connections

