


## OIL TEMPERATURE GAUGE

Illustration of Instrument Connection:

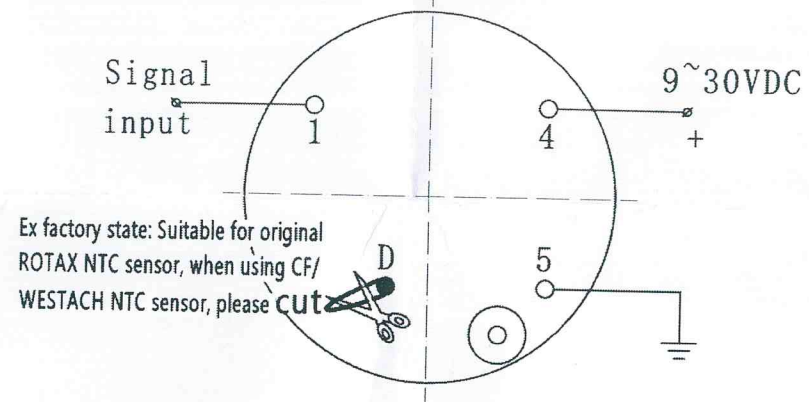

Ex factory state: Suitable for original ROTAX NTC sensor, when using CF/ WESTACH NTC sensor, please cut

### NOTE:

- 1) Installing the instrument from behind the panel, use a 2-1/4" (57mm) hole. Use 4#40 screws to hold instrument secure.
- 2) The gauge is compatible with original ROTAX NTC sensor or CF/ WESTACH NTC sensor. Note: after cutting the wire, ensure that no touch or conduction between the two leads.
- 3) Mount at least 12" away from compass.
- 4) This unit has not been approved for type certified aircraft.
- 5) Do not connect instrument to any other power source. Damage may occur.