BRP-Rotax ILLUSTRATED PARTS CATALOG

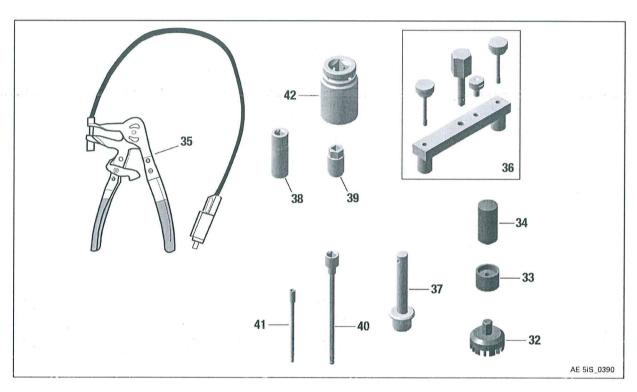


Figure 1.6: Repair tools

ITEM NO.	APPLICATION	ITEM NO.	APPLICATION
32	Water pump impeller	38	Pressure sensor Oil and Airbox
33	Rotary seal ignition housing	39	Temperature sensor Oil and Water
34	Oil seal 12x30x7 water pump shaft	40	Engine mount
35	Spring type hose clip 28	41	Intake manifold
36	Ignition housing	42	Nut for sprag clutch housing
37	Oil seal 28x38x7 ignition housing		