


## BRP-Rotax ILLUSTRATED PARTS CATALOG

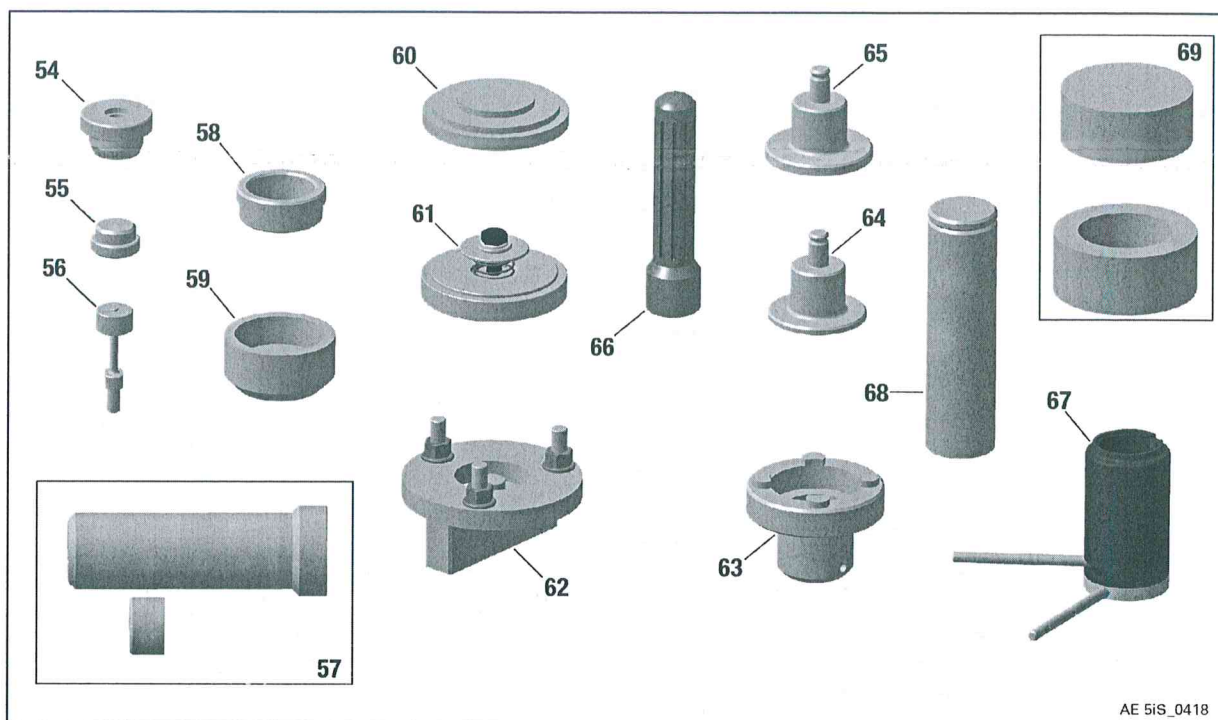

AE 5iS\_0418

Figure 1.8: Repair tools

ITEM NO.	APPLICATION	ITEM NO.	APPLICATION
54	Needle bearing, crankcase	62	Propeller shaft bracket / mounting flange
55	Propeller shaft removal	63	Installation of overload clutch with damper clutch
56	Needle bearing removal	64	Sealing ring, gearbox
57	Hex. nut on propeller shaft	65	Ball bearing, gearbox
58	Damper clutch	66	Stamp
59	Damper clutch	67	Retaining ring, propeller shaft
60	Damper clutch	68	Ball bearing, propeller shaft
61	Damper clutch	69	Overload clutch