


**BRP-Rotax**  
ILLUSTRATED PARTS CATALOG  
**REPAIR TOOLS**

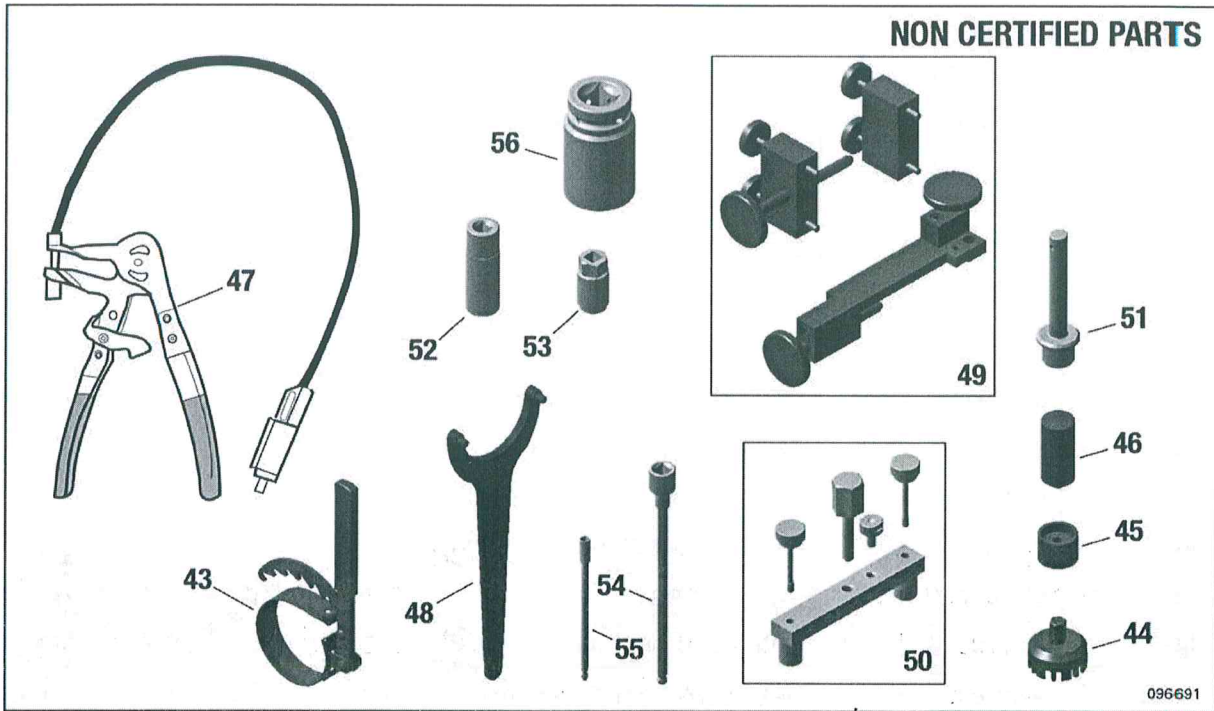

ITEM NO.	Application	ITEM NO.	Application
43	Oil filter removal	50	Ignition housing
44	Waterpump impeller	51	Oil Seal 28x38x7 Ignition housing
45	Rotary seal ignition housing	52	Pressure sensor Oil and Airbox
46	Oil Seal 12x30x7 water pump shaft	53	Temperature sensor Oil and Water
47	Spring type hose clip 28	54	Engine mount
48	Overload clutch	55	Intake manifold
49	Crankcase	56	Nut for sprag clutch housing