


BRP-Rotax
ILLUSTRATED PARTS CATALOG

REPAIR TOOLS

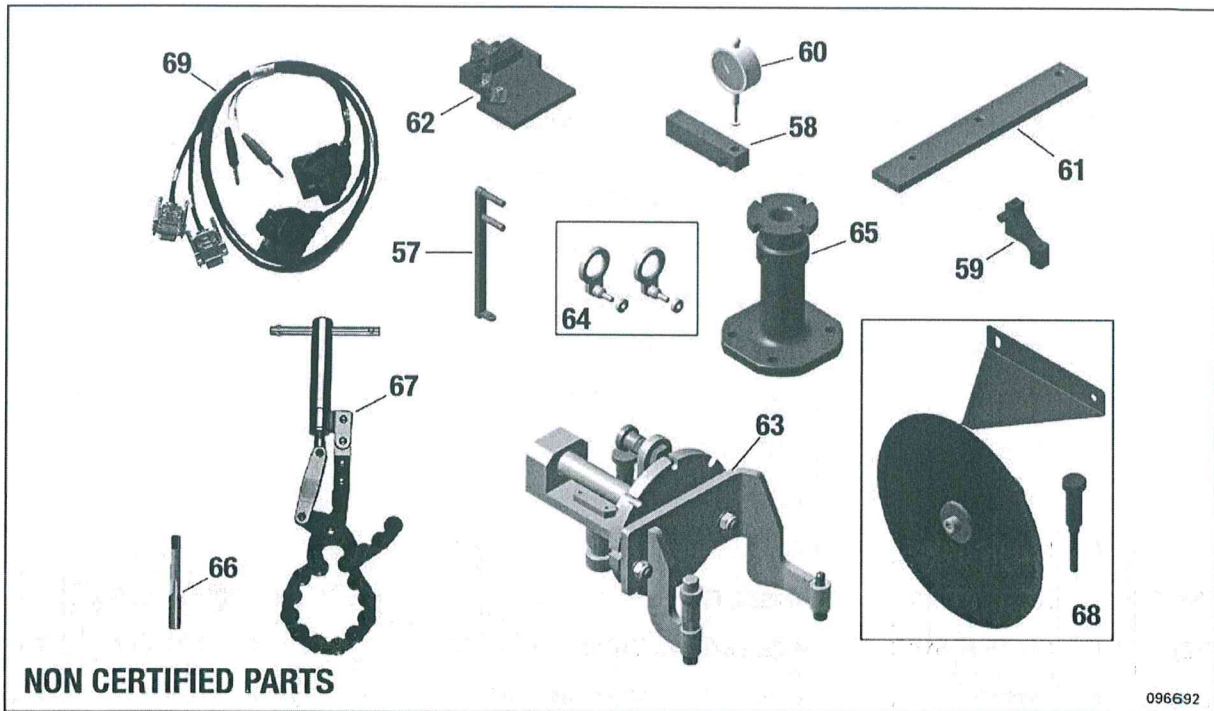

ITEM NO.	Application	ITEM NO.	Application
57	Crankcase	64	Engine removal
58	Checking plain bearing projection	65	Trestle support
59-60	Dial gauge	66	Thread bent socket
61	Checking plain bearing position	67	Oil filter
62	Dial gauge adapter for valve seat inspect	68	Twist of crankshaft
63	Crankcase	69	ECU (Engine Control Unit)