 
 


5. ACTIVATING THE MAINTENANCE INTERVAL TIMER: Press and hold the **S1** and **S2** button simultaneously for 4 seconds. The two digits will increment to 20 seconds and then return to total hours mode. When the engine is running and the maintenance time has reached zero, the service icon will come on.

 


6. VIEWING MAINTENANCE INTERVAL: Press and hold the **S2** button for 4 seconds to view remaining time of your maintenance interval. To continue current maintenance do nothing. If you would like to start a new maintenance interval, repeat steps 4 and 5 again. Each time you want to view the remaining time of your maintenance, press and hold **S2**.

7. RESETTING THE SERVICE ICON: Press and hold the **S1** and **S2** buttons for 20 seconds. The service icon will shut off. The maintenance time will automatically default to the number previously programmed.



8. TO DISPLAY HOURS ONLY: Press and hold the **S1** button until **04** is displayed. Release the **S1** button and the display returns to total hours after 8 to 10 seconds. When the engine is running the display will show hours only, no RPM and the Hour Icon will blink.



9. TO RESET TOTAL HOURS AND MAINTENANCE TIME: Press and hold the **S1** button until **05** is displayed. Release the **S1** button and after 8 seconds the display will return to total hours. Press and hold **S1** and **S2** simultaneously for 20 seconds and the meter will perform a total reset. The total reset option can be removed during manufacture.

